

Instruction Sheet for Door Latch Replacement

⚠ WARNING	
	Electrical Shock Hazard Disconnect power before servicing. Replace all parts and panels before operating. Failure to do so can result in death or electrical shock.

1. Unplug oven or disconnect power.
 2. Remove vent trim just above latch to be replaced.
- NOTE:** Cutting sheet metal will create sharp edges. Use protective gloves when working with sheet metal.
3. Using tin snips, cut the right and left front edge of the access flap in the Air Outlet Duct. (See *Figure 1*)

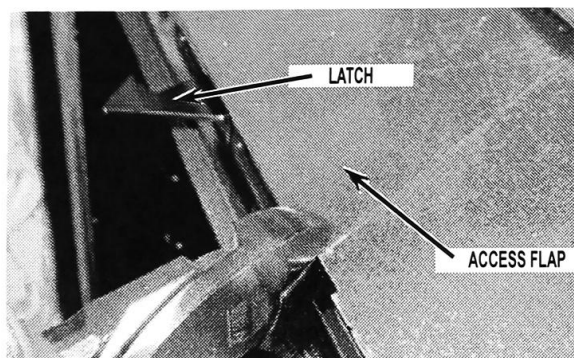


Figure 1

4. Bend flap up and down until access flap breaks off. Discard this flap.
5. Remove (2) screws exposed by removal of access flap. (See *Figure 2*).

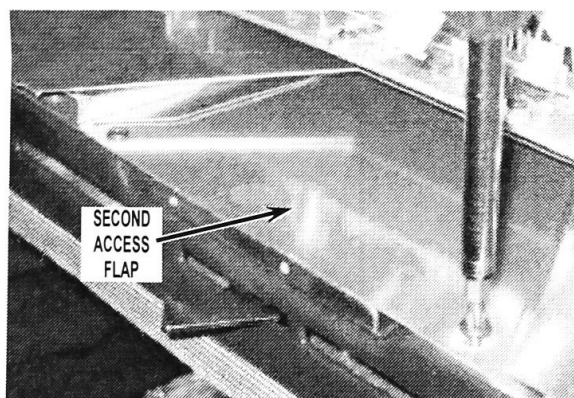


Figure 2

6. Cut the right and left front edge of the second access flap. Do not break off this flap. Bend flap upward to expose the latch.

7. Remove (2) screws that secure door latch and remove latch from oven.
8. Install new door latch and secure with (2) screws.
9. Secure second access flap back in place with (2) screws. Be sure that the flap lays flat and that there are no gaps around the flap.
10. Use Latch Cover included with new latch to close opening where break-off flap was. Position as shown in *Figure 3*.

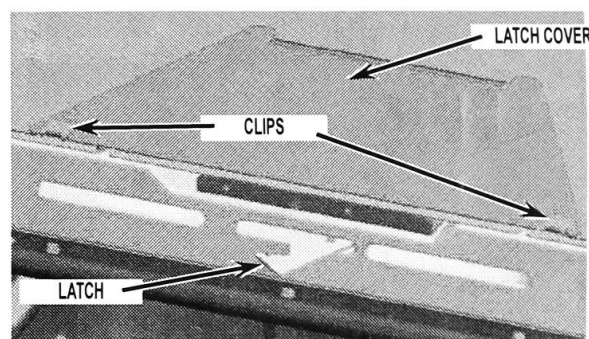


Figure 3

11. Secure Latch cover with clips included with new latch. Locate clips in notch as shown in *Figure 3 and 4*. Be sure there are no gaps around the cover.

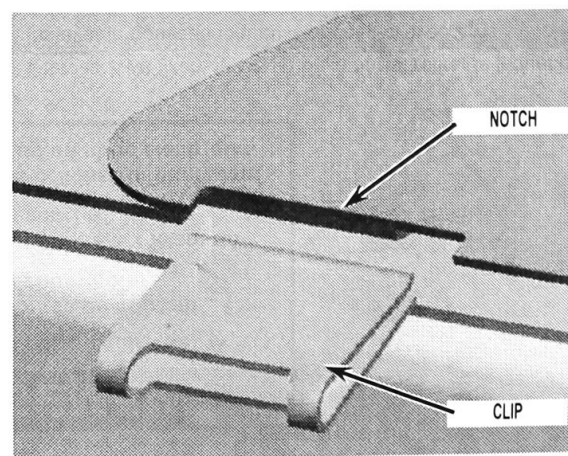


Figure 4

12. Install Vent Trim back on oven.
13. Plug in oven or reconnect power and check operation.

Fiche d'instructions

Remplacement du loquet de la porte

⚠ AVERTISSEMENT	
	Risque de choc électrique
	Déconnecter la source de courant électrique avant l'entretien.
	Replacer pièces et panneaux avant de faire la remise en marche.
Le non-respect de ces instructions peut causer un décès ou un choc électrique.	

- Débrancher le four ou déconnecter la source de courant électrique.
- Enlever la garniture de l'évent juste au-dessus du loquet à remplacer.
- REMARQUE:** Le découpage à la cisaille produira des arêtes acérées; porter des gants pour les opérations sur la tôle.
- Utiliser une cisaille de ferblantier; couper à droite et à gauche la rive avant de la plaque de fermeture dans le conduit d'extraction d'air. (Voir Figure 1)
- Ôter les 2 vis fixant le loquet de la porte; retirer le loquet du four.
- Installer le nouveau loquet; fixer celui-ci avec 2 vis.
- Remettre la plaque de fermeture en place; fixer la plaque avec 2 vis. Veiller à ce que la plaque repose à plat, sans laisser d'espace autour.
- Utiliser le couvre-loquet fourni avec le nouveau loquet pour fermer l'ouverture laissée par la section de tôle enlevée à l'étape 4. Positionner le couvre-loquet comme on le voit à la Figure 3.

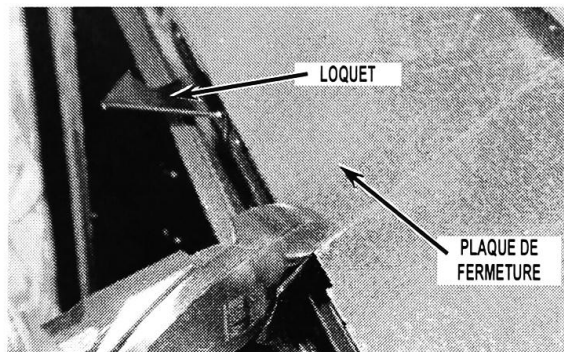


Figure 1

- Effectuer des manœuvres successives de flexion vers le haut et vers le bas pour briser/détacher cette partie de la tôle; jeter ce morceau de tôle.
- Ôter les 2 vis qui sont maintenant exposées. (Voir Figure 2).

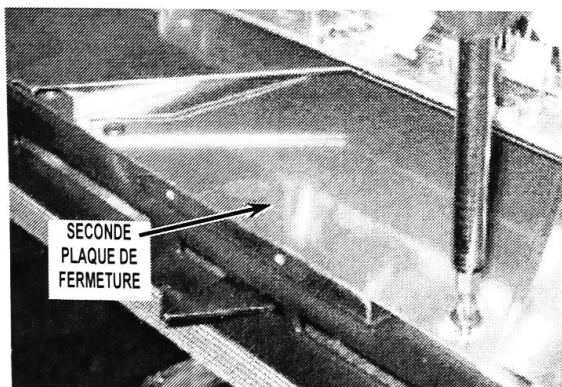


Figure 2

- Couper à droite et à gauche la rive avant de la seconde plaque de fermeture; relever cette section de tôle sans la briser, pour exposer le loquet.

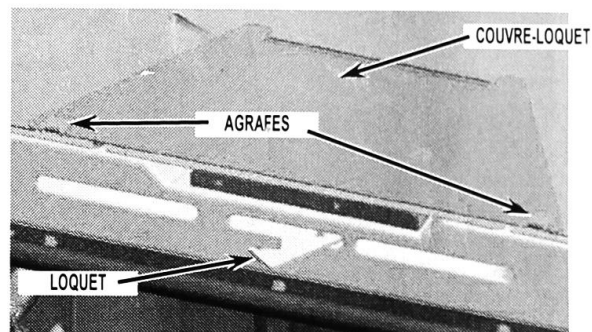


Figure 3

- Fixer le couvre-loquet avec les agrafes fournies; installer les agrafes dans l'encoche – voir les Figures 3 et 4. Veiller à ne pas laisser d'espace autour.

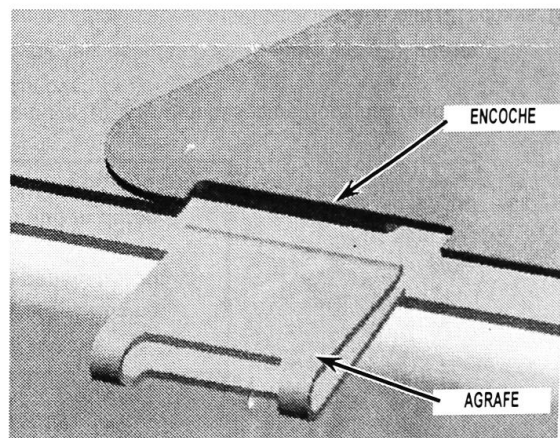


Figure 4

- Réinstaller la garniture de l'évent sur le four.
- Brancher le four ou reconnecter la source de courant électrique; contrôler le bon fonctionnement du four.